
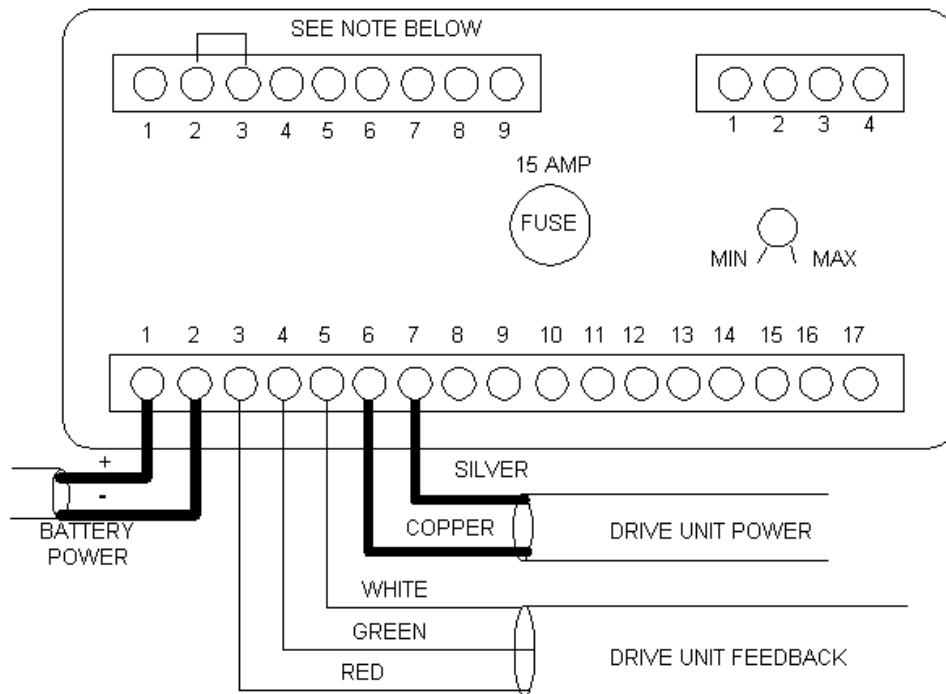


PORT EXTENSION - DRIVE UNIT WIRING

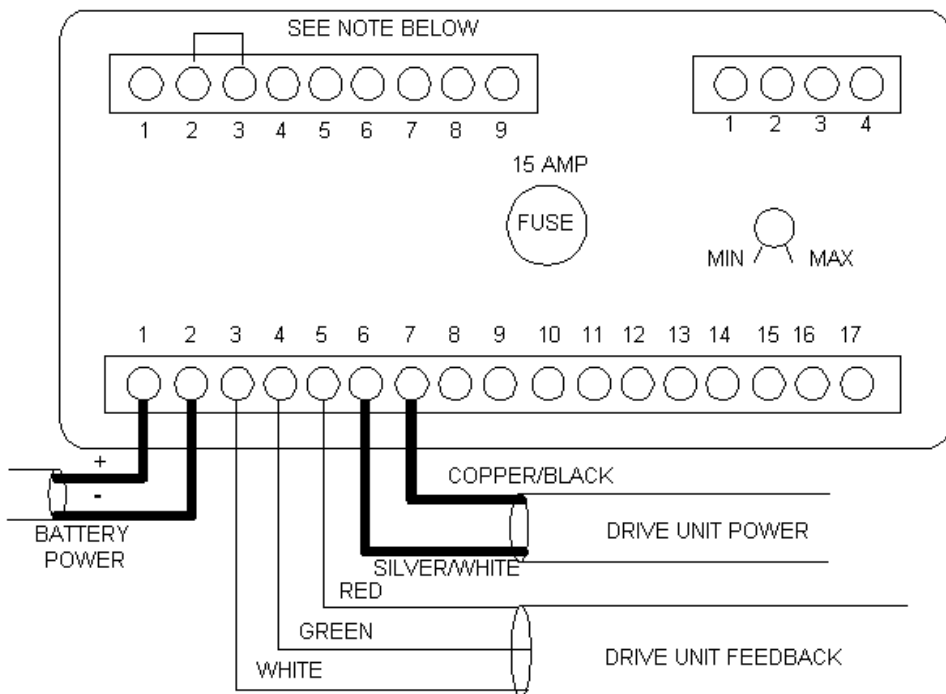

STARBOARD EXTENSION - DRIVE UNIT WIRING

**Note:**

If the control unit is fitted with an Auxiliary Control connector, install the jumper shown (Between 2 and 3 on the 9 pin connector) to test the unit prior to connecting the Auxiliary Control. The unit will not turn on without the jumper or Auxiliary Control connected