

File Edit View Window Help

Comment

## Bookmarks

- [-] Safety
- [-] Information relating to fire risks and risks of explosion
- [-] **Electrical system**
- [-] Liquefied Petroleum Gas (LPG) system (LPG)
- [-] Domestic appliances
- [-] Audio-visual equipment
- [-] Onboard comfort
- [-] Water systems
- [-] Engine
- [-] Steering system
- [-] Deck fittings
- [-] Hull fittings
- [-] Handling, transport

Maintenance

- Check at least once a year that the inverter cables and connections are properly bundled.
- Clean the inverter by removing any accumulated dust to ensure good ventilation.

The control located on the equipment

Remote control  
Location: Chart table

Layout of components (CRUISER version - 3 cabins): Starboard aft cabin.

Version 3 cabins



1. Breaker - 100A
2. Earthing plate (Inside view)
3. DC/AC converter
4. Bipolar circuit breaker

Version 2 cabins  
Access: Starboard cockpit lockerRelay box  
Location: Port saloon

- !** The power to the inverter must only be supplied by lead batteries.
- Refer to manufacturer's instructions for use and maintenance.
- NEVER:**
- connect the inverter AC lead to an AC terminal or to the generator onboard.
  - disconnect the wiring from the inverter when in use.
  - open the inverter.

AC system — 8