



- 1. Clamp
- 2. Engine Stop lever
- 3. Engine stop remote control cable

[3-7.] Recommended battery capacity

Use sufficient capacity of battery.

| | | |
|----------------|---|--------------------|
| 1GM, 2GM, 3GMD | - | 12V - 70AH (Mini) |
| 3HM | - | 12V - 100AH (Mini) |



1