


### ■ Main unit (controller detached)

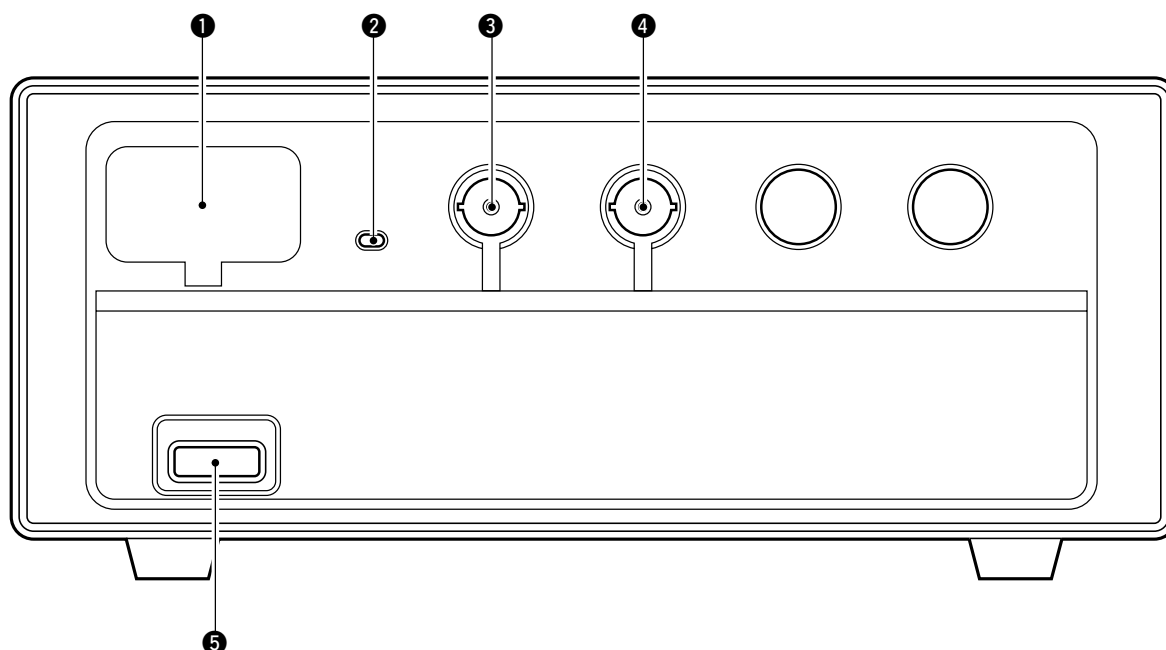

**❶ RS-232C CONNECTOR** (p. 18)

Connects the IC-M710RT to a PC via an RS-232C cable for remote control of transceiver function using the optional RS-710RT software.

**❷ POWER INDICATOR**

Appears while power is turned on.

**❸ CONTROLLER CONNECTOR**

Connects the main body of the IC-M710RT to the front panel (controller) when detached from the main body.

**❹ CONTROLLER CONNECTOR** (pgs. 16, 17)

Same as above.

**❺ POWER SWITCH**

Same function as the power switch ([POWER]) on the front panel.

- Only available on the Europe and GMDSS versions.

**◇ HM-120 microphone keys**

The “P” key on the HM-120 HAND MICROPHONE can be set to function as the [MODE], [NB], [AGC], [SQL] or [TUNE] keys on the remote controller. (The ▲▼ keys function the same as the [CHANNEL] selector). Also, using set mode (p. 15) these keys can be deactivated if desired.

While pushing [P] on the microphone and the switch on the remote controller whose function you want to assign (see above), turn power ON.

- Repeat this to assign a different key.